

ReechCraft.
Bronco™

OPERATOR'S SAFETY MANUAL





reechcraft.com/bronco

It is important that you read, understand, and obey the contents of this manual. Keep it with the Bronco at all times.

The purpose of this manual is to provide safe and proper operating procedures for anyone utilizing this all-terrain scaffold.

Because we at ReechCraft are always working to improve our products, processes, and procedures, we reserve the right to make changes without prior notice. Please contact ReechCraft for updated information.

SAFETY ALERT SYMBOLS AND SAFETY SIGNAL WORDS



This is the Safety Alert Symbol. It is used throughout this manual and on the Bronco to alert you to potential personal injury hazards. Understand and obey all safety messages that correspond with this symbol to avoid possible injury or death.



INDICATES AN IMMINENTLY HAZARDOUS SITUATION THAT, IF NOT AVOIDED, WILL RESULT IN SERIOUS INJURY OR DEATH. THIS DECAL WILL HAVE A RED BACKGROUND.



INDICATES A POTENTIALLY HAZARDOUS SITUATION THAT, IF NOT AVOIDED, COULD RESULT IN SERIOUS INJURY OR DEATH. THIS DECAL WILL HAVE AN ORANGE BACKGROUND.



INDICATES A POTENTIALLY HAZARDOUS SITUATION THAT, IF NOT AVOIDED, MAY RESULT IN MINOR OR MODERATE INJURY. IT MAY ALSO ALERT AGAINST UNSAFE PRACTICES. THIS DECAL WILL HAVE A YELLOW BACKGROUND.

⚠ WARNING

THIS PRODUCT MUST COMPLY WITH ALL SAFETY-RELATED BULLETINS. CONTACT REECHCRAFT OR THE LOCAL AUTHORIZED REECHCRAFT REPRESENTATIVE FOR INFORMATION REGARDING SAFETY-RELATED BULLETINS THAT MAY HAVE BEEN ISSUED FOR THIS PRODUCT.

⚠ NOTICE

REEHCRAFT SENDS SAFETY-RELATED BULLETINS TO THE OWNER ON RECORD OF THIS BRONCO. CONTACT REECHCRAFT TO ENSURE THAT THE CURRENT OWNER RECORDS ARE UPDATED AND ACCURATE.

REEHCRAFT MUST BE NOTIFIED IMMEDIATELY IN ALL INSTANCES WHERE OUR PRODUCTS HAVE BEEN INVOLVED IN AN ACCIDENT INVOLVING BODILY INJURY OR DEATH OF PERSONNEL, OR WHERE SUBSTANTIAL PERSONAL PROPERTY DAMAGE OR DAMAGE TO THE REECHCRAFT PRODUCT HAS OCCURRED.

Contact Information

Contact Us Regarding:

- Accident Reporting
- Product Safety Publications
- Current Owner Updates
- Product Safety Questions
- Standards and Regulations Compliance Information
- Questions Regarding Special Applications
- Questions Regarding Product Modifications
- Replacement Parts or Repairs

Contact Information:

Technical Safety and Engineering Department

845 34th St N, Fargo, ND 58102
customer.service@reechcraft.com

In USA: 888-600-6160 • **Outside USA:** 701-280-5900

REVISION LOG

Updated Version of Manual	May 2023
Original Version of Manual	May 2019

TABLE OF CONTENTS

Safety Alert Symbols and Safety Signal Words	2
Contact Information.....	3

SECTION 1 - SAFETY PRECAUTIONS

1.0 Introduction.....	6
1.1 Pre-operation	6
Operator Preparedness	6
Worksite Inspection	7
Bronco Inspection.....	7
1.2 Bronco Safety Information.....	8
Fall Hazards.....	8
Tipping Hazards.....	8
Electrocution Hazards.....	9

SECTION 2 - PREPARATION + INSPECTION

2.0 Introduction.....	10
2.1 Operator Requirements.....	10
Operator Responsibilities.....	10
2.2 Preparation, Inspection, + Maintenance	11
Pre-start Inspection.....	11
2.3 Daily Walk-around Inspection + Function Check	12
Walk-around Inspection and Function Check Components	13

SECTION 3 - OPERATION

3.0 Introduction.....	14
3.1 Setting Up the Bronco	15
Getting Started.....	15
3.2 Weight Distribution.....	16
3.3 Platform Configuration	16

SECTION 4 - EMERGENCY PROCEDURES

4.0 Introduction.....	17
-----------------------	----

SECTION 5 - GENERAL SPECIFICATIONS

5.0 Introduction.....	18
5.1 Bronco Specifications.....	18
5.2 Decal Contents + Locations.....	20

SECTION 6 - SERVICE + MAINTENANCE

6.0 Introduction 21
Maintenance Safety 22
6.1 Preparation, Inspection, + Maintenance 23
Preparation, Inspection, and Maintenance 23
Pre-start Inspection 23
Frequent and Pre-delivery Inspection 23
Annual Inspection 24
6.2 Preventive Maintenance + Inspection Schedule 24
Inspection and Maintenance Codes 24
6.3 Servicing + Maintenance Guidelines 25
Safety and Workmanship 25
Cleanliness 26
6.4 Decal Replacement 26
Maintenance Log 27

SECTION 7 - WARRANTY 28

LIST OF TABLES

1.0 Minimum Approach Distances (MAD) 9
2.0 Inspection + Maintenance 12
5.0 Bronco Specifications 18
5.1 Decal Contents + Locations 20
6.0 Preventive Maintenance + Inspection Schedule 25
6.1 Maintenance Log 27

LIST OF FIGURES

2.0 Inspection Points 13
3.0 Bronco with Extended Legs 14
3.1 Caution Label 16
3.2 Broncos + Platform 16
5.0 Fully Retracted Broncos + Platform - Top-down View 19
5.1 Fully Retracted Broncos + Platform 19
5.2 Fully Extended Broncos + Platform 19
5.3 Bronco with Decals 20

SECTION 1

SAFETY PRECAUTIONS

1.0 Introduction

This section is the starting point for establishing habitual precautions for safe operation of the Bronco. This manual is your guide in developing a daily routine that focuses on safety and proper maintenance prior to each use. A maintenance program must be established and conducted by a qualified person to ensure the Bronco is in safe working condition before it is operated.

Before operating the Bronco, the operator must:

1. Read, understand, and obey the operating instructions and safety rules in the manual.
2. Obey all labels, warnings, and instructions located on the Bronco.
3. Be sure that all occupants of the all-terrain scaffold wear appropriate personal protective equipment (PPE) for the conditions.

If there are any questions regarding safety, training, maintenance, inspection, application, or operation of the Bronco, please contact ReechCraft.



FAILURE TO COMPLY WITH THE SAFETY PRECAUTIONS LISTED IN THIS MANUAL COULD RESULT IN SCAFFOLD DAMAGE, PROPERTY DAMAGE, PERSONAL INJURY, OR DEATH.

1.1 Pre-operation

Operator Preparedness

- Do not operate the Bronco until the operator has read and fully comprehends this Operator's Safety Manual.
- Only competent personnel may operate the Bronco.
- Read, fully comprehend, and obey all dangers, warnings, cautions, and operating instructions on the Bronco and in this manual.
- Only use this Bronco in a manner which is within the scope of the intended application set by ReechCraft.
- All operating personnel must be familiar with the emergency procedures and controls specified in this manual.
- All operating personnel must read, comprehend, and obey all applicable employer, local, and governmental regulations as they pertain to the safe operation of the Bronco.

Worksite Inspection

- The operator is to take measures to identify and avoid all hazards in the work area that will affect the safe operation of the Bronco.

Bronco Inspection

- Before operation, perform walk-around inspections and function checks. Refer to Section 2 of this manual for further instructions.
- No one is to operate the Bronco until it has been inspected, serviced, and maintained according to the requirements in this manual.

⚠ WARNING

MODIFICATION OR ALTERATION OF THE BRONCO SHALL BE MADE ONLY WITH PRIOR WRITTEN PERMISSION FROM THE MANUFACTURER.

- Do not operate any Bronco on which the safety decals are missing or illegible.
- Avoid any buildup of debris on the platform floor. Keep mud, oil, grease, and other slippery substances from footwear and the platform floor.

1.2 Bronco Safety Information

- Do not use the Bronco for any purpose other than positioning personnel and their tools, equipment, and materials.
- Never operate a Bronco that is not working properly. If a malfunction occurs, stop use of the Bronco and contact ReechCraft.
- Unless in an emergency, do not allow personnel to tamper with or operate the Bronco from the ground with personnel on the platform.
- The operator will not mount the platform unless the bearing surface is stationary and capable of supporting the intended load.

Fall Hazards

- Before operating the Bronco, make sure the back leg is in the proper position. Be sure the platform is properly placed on the all-terrain scaffold unit before mounting.
- Keep both feet firmly positioned on the platform floor at all times. Never use ladders, boxes, steps, planks, or any other item on the platform to provide additional height for greater reach.
- Always use extreme caution when mounting or dismounting the platform.
- Always maintain three points of contact with the Bronco. "Three point contact" means using two hands and one foot or two feet and one hand at all times while mounting or dismounting the platform.

Tipping Hazards

- Be sure the bearing surface is solid, stationary, and capable of supporting the intended load.
- Before mounting the platform, ensure that all locking pins are fully engaged.
- Check the back leg label to ensure the horizontal line is parallel to the ground and the vertical line is plumb.
- Before using the Bronco on floors and other surfaces, check allowable capacity of the surfaces.
- Never exceed the maximum platform capacity. Distribute loads evenly on the platform.

Electrocution Hazards

- This all-terrain scaffold is not insulated and will not provide protection from contact or proximity to electrical current.
- Maintain distance from electrical lines, apparatus, or any energized (exposed or insulated) parts according to the Minimum Approach Distance (MAD) as shown in Table 1.0.
- Maintain a clearance of at least 10 ft (3 m) between any part of the all-terrain scaffold and its occupants, their tools, and their equipment from any electrical line or apparatus carrying up to 50,000 volts. For every additional 30,000 volts or less, 1 ft (.3 m) additional clearance is required.
- The minimum safe approach distance may be reduced if insulating barriers are installed to prevent contact, and if the barriers are rated for the voltage of the line being guarded. These barriers shall not be part of (or attached to) the Bronco. The minimum safe approach distance shall be reduced to a distance within the designed working dimensions of the insulating barrier. This determination shall be made by a qualified person in accordance with employer, local, or governmental requirements for work practices near energized equipment.

Table 1.0 - Minimum Approach Distances (MAD)

VOLTAGE RANGE (PHASE TO PHASE)	MINIMUM SAFE APPROACH DISTANCE - FEET (METERS)
0-50 KV	10 ft (3 m)
Over 50 KV to 200 KV	15 ft (5 m)
Over 200 KV to 350 KV	20 ft (6 m)
Over 350 KV to 500 KV	25 ft (8 m)
Over 500 KV to 750 KV	35 ft (11 m)
Over 750 KV to 1000 KV	45 ft (14 m)

Note: This requirement shall apply except where employer, local, or governmental regulations are more stringent.

SECTION 2

PREPARATION + INSPECTION

2.0 Introduction

The Bronco is intended to be used as a personnel handling device and must be operated and maintained by competent personnel only.

Anyone under the influence of drugs or alcohol, or who is subjected to bouts of dizziness, seizures, or loss of physical control must not operate this all-terrain scaffold.

2.1 Operator Requirements

Before operating the Bronco, the operator must read and comprehend this manual.

The operator must be familiar with:

- Use and limitations of the components of the Bronco, including the specification requirements.
- Instruction warning decals on the Bronco and in this manual.
- Employer and government regulations.
- Use of approved fall protection device (where applicable).
- Sufficient mechanical aptitude and knowledge of the Bronco to recognize a component malfunction or a potential malfunction.
- The safest means to operate the Bronco where overhead and ground hazards are present. These hazards include overhead obstructions, additional moving equipment, obstacles, depressions, drop-offs, etc.
- A means to avoid unprotected electrical conductors.
- The specific job requirements.

Operator Responsibilities

The exercise of good judgment, safety control, and caution in evaluating each situation is the responsibility of the operator. The operator must stop use of the Bronco in the event of a malfunction or other unsafe condition of the all-terrain scaffold or worksite.

2.2 Preparation, Inspection, + Maintenance

Pre-start Inspection

The pre-start inspection should include each of the following:

- **Cleanliness** - Check all surfaces for leakage, debris, or foreign objects.
- **Decals** - Check for cleanliness and legibility. Make sure none of the decals are missing. Make sure all illegible decals are cleaned or replaced. Refer to Section 5.2 for decal contents and locations.
- **Safety and Service** - Make sure a copy of the Operator's Safety Manual is accessible and enclosed in a weather resistant container.
- **Setup** - Make sure the Bronco is set up in accordance with Section 3.1.
- **Daily Walk-around Inspection and Function Check** - Once the walk-around inspection is complete, perform a function check of all systems in an area free of all overhead or ground-level obstructions. Refer to Section 2.3 for additional information.

Table 2.0 outlines the periodic inspection and maintenance recommended by ReechCraft. Consult local regulations for further requirements.

The frequency of inspections and required maintenance must be increased if the Bronco is exposed to harsh conditions, increased use, or if it is used in a severe manner.

Note: Use this manual to perform inspections.

Table 2.0 - Inspection + Maintenance (Reference Section 6.1)

TYPE	FREQUENCY	PRIMARY RESPONSIBILITY	SERVICE QUALIFICATION	REFERENCE
Pre-start Inspection	Before starting each day or at shift change	Operator	User or Operator	Operator's Safety Manual
Frequent and Pre-delivery Inspection	In service or out of service for three months or purchased used	Owner, Dealer, or User	User or Operator	Operator's Safety Manual
Annual Inspection	Every 12 months	Owner, Dealer, or User	User or Operator	Operator's Safety Manual
Replacement	When locking pins are worn or damaged	Owner, Dealer, or User	User or Operator	Operator's Safety Manual

2.3 Daily Walk-around Inspection + Function Check

Begin the daily walk-around inspection starting at item one as noted in Figure 2.0. Continue around the Bronco, checking each item in sequence for the conditions listed in the checklist on page 13.

⚠ WARNING

IF THE BRONCO DOES NOT OPERATE PROPERLY, STOP USING IT IMMEDIATELY. REPORT THE PROBLEM TO THE PROPER MAINTENANCE PERSONNEL AND DO NOT OPERATE THE BRONCO UNTIL IT HAS BEEN DEEMED SAFE FOR OPERATION.

Note: On all components, make sure there are no loose or missing parts and that everything is securely fastened. Make sure that there is no visible damage or excessive wear.

Walk-around Inspection and Function Check Components

1. **Locking Pins** - Check for any debris stuck to or around the locking pins. Make sure the locking pins are working properly and engage freely.
2. **Spreader** - Check for bent parts or missing hardware. Make sure the spreader folds out flat and functions properly.
3. **Rubber Feet** - Check for cracks or tears.
4. **Hinge Mount** - Check all four hinge mount brackets to ensure they are straight.
5. **TwistLok™** - Check for proper function and that locking pins can fully engage the frame clearance holes.

Figure 2.0 - Inspection Points




SECTION 3 OPERATION

3.0 Introduction

Note: The manufacturer has no direct control over the Bronco application and operation. The operator is responsible for following sound safety practices.

The ReechCraft Bronco is an all-terrain scaffold. A removable platform is mounted to a set of Broncos. The all-terrain scaffold is stabilized by way of adjustable legs and locking pins. The Bronco's intended purpose is to provide personnel and their tools access to work areas above the ground.

Figure 3.0 - Bronco with Extended Legs

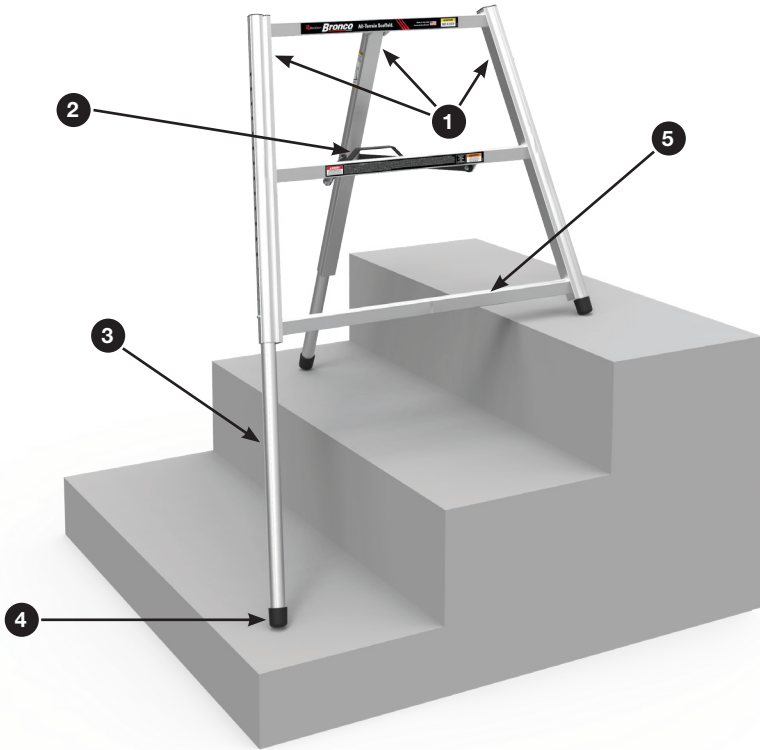

Legend


- | | |
|--|----------------------------------|
| 1. Tapered Tripod Design | 4. Non-skid Rubber Feet |
| 2. Heavy-duty Spreader | 5. Slip-resistant and Heavy Duty |
| 3. Three Telescoping Legs with TwistLok™ | |

3.1 Setting Up the Bronco

Note: For the purposes of this section, it is assumed that the Bronco is in its fully stowed configuration.

Getting Started

1. Unfold the Bronco by pulling out the rear leg and pressing down on the spreader to lock the leg into position.
2. Push down on the locking pin, rotate the bottom of the leg, and extend to the desired length. Twist the leg to spring the pin into the hole. Be sure the locking pin is fully engaged.
3. To ensure proper setup, consult the rear leg decal.

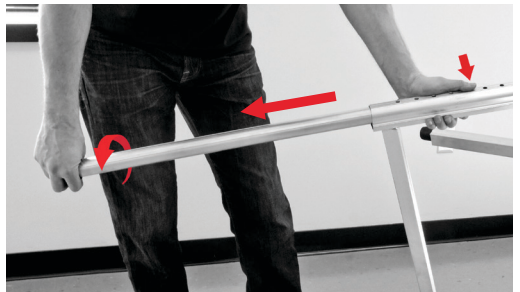


3.2 Weight Distribution

Note the decal on the back leg and ensure that the horizontal line is parallel to the ground and the vertical line is plumb. (See Figure 3.1)

Note: This label is located on the side of the middle leg of the Bronco and must be followed to ensure proper setup.

Figure 3.1 - Caution Label

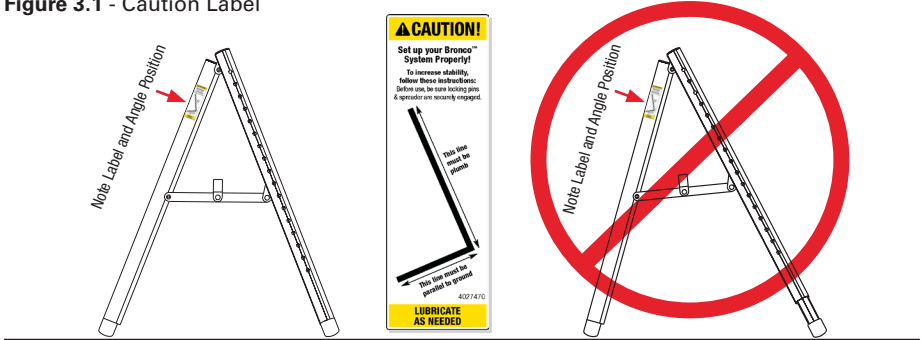


3.3 Platform Configuration

Ensure that the Bronco is angled like the diagrams below for easy plank access and proper weight distribution. (See Figure 3.2)

Note: Do not overload the Bronco. Duty rating is 300 lbs per Bronco.

Figure 3.2 - Broncos + Platform

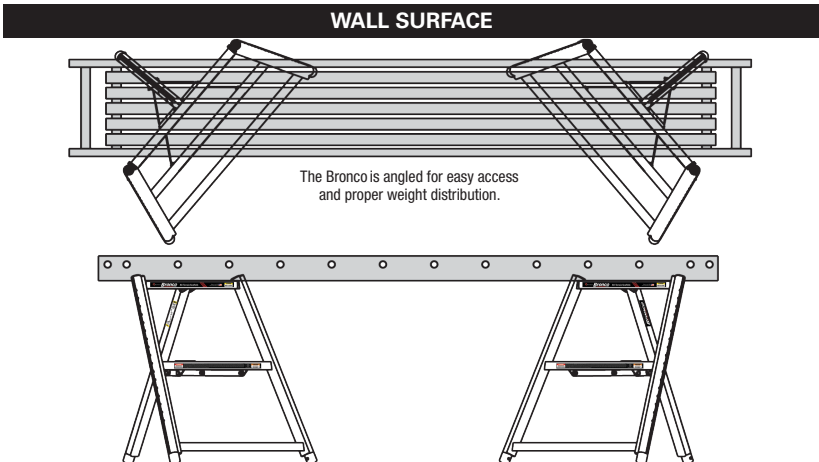

SECTION 4

EMERGENCY PROCEDURES

4.0 Introduction

ReechCraft must be notified immediately of any incident involving a ReechCraft product. Even if no injury or property damage is evident, the factory should be contacted by telephone and provided with the necessary details.

Technical Safety and Engineering Department

845 34th St N, Fargo, ND 58102
customer.service@reechcraft.com

In USA: 888-600-6160 • **Outside USA:** 701-280-5900

Failure to notify the manufacturer of an incident involving a ReechCraft Bronco product within 48 hours of such an occurrence may void any warranty consideration on that particular Bronco.

NOTICE

FOLLOWING ANY ACCIDENT, THOROUGHLY INSPECT THE BRONCO AND TEST ALL FUNCTIONS. DO NOT MOUNT THE PLATFORM UNTIL YOU ARE SURE THAT ALL DAMAGE HAS BEEN REPAIRED IF REQUIRED, AND THE ALL-TERRAIN SCAFFOLD IS OPERATING CORRECTLY.

SECTION 5

GENERAL SPECIFICATIONS

5.0 Introduction

This section of the manual provides operating specifications and information necessary for the proper maintenance of this all-terrain scaffold.

5.1 Bronco Specifications

Table 5.0 - Bronco Specifications (See Figures 5.0, 5.1, and 5.2 on page 19)

BRONCO SPECIFICATIONS		
	Unit Size (L x W x H) Note: <i>Width is at the widest point.</i>	37.7 in. x 28.5 in. x 33.7 in. (958 mm x 724 mm x 856 mm)
	Fully Extended Unit Size (L x W x H) Note: <i>Width is at the widest point.</i>	44 in. x 28.5 in. x 55.3 in. (1118 mm x 724 mm x 1405 mm)
	Platform Capacity	600 lbs (272 kg) (300 lbs/Bronco)
	All-terrain Scaffold Weight	16 lbs (7.26 kg)
	Maximum Working Height*	11 ft (3.3 m)
A	Maximum Platform Width	24 in. (610 mm)
B	Maximum Suggested Platform Length***	32 ft (9.75 m)
C	Minimum Platform Height**	36 in. (914 mm)
D	Maximum Platform Height**	59 in. (1499 mm)

*Based on 4 in. platform height plus 6 ft.

**Based on a 4 in. platform height.

***Engineered aluminum 32 ft platforms can weigh approximately 250 lbs. At 600 lbs per pair total Bronco payload capacity, that leaves 350 lbs for user, tools, and materials.

Figure 5.0 - Fully Retracted Broncos + Platform - Top-down View

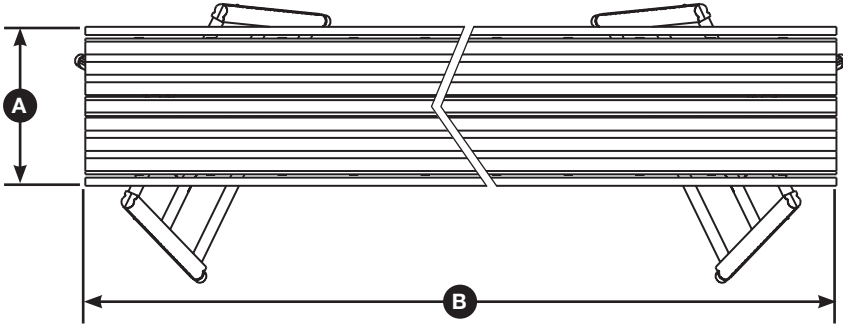


Figure 5.1 - Fully Retracted Broncos + Platform


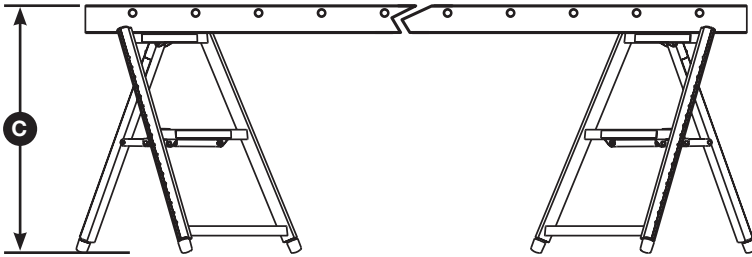


Figure 5.2 - Fully Extended Broncos + Platform

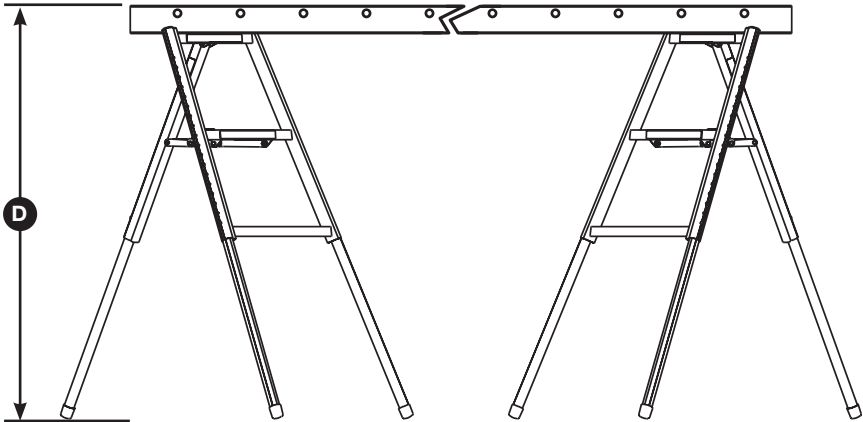

5.2 Decal Contents + Locations

Table 5.1 - Decal Contents + Locations (See Figure 5.3)

	TYPE	PART NUMBER
A1	Brand and Caution Not A Step	4027468
A2	Proper Bronco Setup	4027470
A3	Brand	4027469
A4	Warning	4027467
	User Manual	4023034

Figure 5.3 - Bronco with Decals



SECTION 6

SERVICE + MAINTENANCE

6.0 Introduction

This section contains general safety precautions that must be observed during maintenance of the Bronco. It is important that maintenance personnel follow these warnings to avoid possible injury to themselves or others. A maintenance program must be established by a competent person and followed to ensure the Bronco is in safe operating condition.

ReechCraft is committed to continuous improvement and reserves the right to make specification changes without prior notification. Contact ReechCraft for updated information.

⚠ WARNING

MODIFICATION OF THE BRONCO WITHOUT THE MANUFACTURER'S APPROVAL IS A PROHIBITED PRACTICE AND A DIRECT SAFETY VIOLATION.

⚠ WARNING

SINCE THE MANUFACTURER HAS NO DIRECT CONTROL OVER THE FIELD SERVICE AND MAINTENANCE OF THE BRONCO, SAFETY IS THE RESPONSIBILITY OF THE OWNER/OPERATOR.

Maintenance Safety

Your safety, and the safety of others, is the primary concern when performing service and maintenance on the Bronco.

- Remove all rings, watches, and jewelry when performing any maintenance.
- Observe, understand, and obey all danger, warning, caution, and other instructions on the Bronco and in the Operator's Safety Manual.
- Keep standing surfaces and hand holds free of grease, water, oil, etc.
- Use only approved, nonflammable cleaning solvents.
- Always be conscious of moving parts and pinch points.
- Never leave an object in an unstable or unsupported position.

WARNING

FAILURE TO COMPLY WITH THE SAFETY PRECAUTIONS LISTED IN THIS SECTION IS A SAFETY VIOLATION AND COULD RESULT IN DAMAGE, INJURY, OR DEATH.

6.1 Preparation, Inspection, + Maintenance

This section provides the necessary information needed by those personnel that are responsible to place the Bronco in operational readiness and maintain its safe operating condition. To ensure maximum service life and safe operation, be sure that all inspections and maintenance have been completed before placing the Bronco into service.

Preparation, Inspection, and Maintenance

It is important to establish a comprehensive inspection and preventative maintenance program. Table 2.0 outlines the periodic inspection and maintenance recommended by ReechCraft. Consult your local, regional, or national regulations for further requirements.

Note: *The frequency of inspections must increase as environment and frequency of use requires.*

Pre-start Inspection

It is the operator's responsibility to perform a pre-start inspection of the Bronco prior to use. Refer to Section 2 for pre-start inspection procedures.

This manual must be read and understood in its entirety prior to performing a pre-start inspection.

Frequent and Pre-delivery Inspection

The frequent inspection and pre-delivery inspection shall be performed by a competent person or a qualified mechanic.

The frequent inspection and pre-delivery inspection procedures are performed in the same way but at different times. The pre-delivery inspection shall be performed prior to each sale, lease, or rental delivery. The frequent inspection shall be performed on each all-terrain scaffold in service for three months; out of service for more than three months; or when purchased used. Reference the appropriate areas of this manual for service and maintenance procedures.

Note: *The frequency of this inspection must increase as environment and frequency of use requires.*

Annual Inspection

The annual inspection must be performed by a competent person or a qualified mechanic on an annual basis, no later than 13 months from the date of the prior annual inspection.

Reference the service and maintenance sections of this manual and appropriate inspection form to complete this inspection.

6.2 Preventive Maintenance + Inspection Schedule

The preventive maintenance and inspection checks are listed and defined in Table 6.0. The table is divided into two parts: "Area" and "Interval". The component or function to be inspected is listed in the "Area" column, and the interval at which time they are to be inspected is listed in the "Interval" column.

Note: *The checks and services listed in this schedule are not intended to take the place of any local or regional regulations that may pertain to this type of equipment, nor should the list be considered as comprehensive. Variances in interval times may occur due to the environment the Bronco is subjected to.*

Inspection and Maintenance Codes:

1. Check for proper and secure installation.
2. Ensure there are no visible gouges, excessive wear, or dents.
3. Visually inspect for excessive wear, damage, cracks, or distortion.
4. Check for cracked or broken welds.
5. Ensure worksite is clean and free of debris.
6. Check for proper adjustment.
7. Check for proper operation.
8. Check for proper tolerances.
9. Check for proper specifications.
10. Verify parts are neither damaged nor missing.
11. Perform service and maintenance as necessary.
12. Replace any damaged or missing parts.
13. Inspect per Operator's Safety Manual.

Table 6.0 - Preventive Maintenance + Inspection Schedule

AREA	INTERVAL			
	Pre-start Inspection	Frequent and Pre-delivery Inspection	Annual (Yearly) Inspection	5-year Inspection
	Prior to Use Each Day	Prior to Each Sale, Lease or Delivery; In/Out of Service for Three Months or More; Purchased Used	Perform No Later than 13 Months from the Date of Prior Inspection	No More than Five Years from First Use
Locking Pins	1, 3, 5	1, 2, 3, 5	1, 2, 3, 5	
Spreader	5, 7	5, 7	5, 6, 7	
Rubber Feet	1, 3	1, 3	1, 3	1, 5
TwistLok™	5, 7	3, 5, 7	1, 3, 5, 7	
Hinge Mount	3	3	3, 4	

6.3 Servicing + Maintenance Guidelines

The following information is provided to assist you in the use and application of service and maintenance procedures contained in this section.

⚠ CAUTION

WHEN AN ABNORMAL CONDITION IS NOTED AND PROCEDURES CONTAINED WITHIN THIS MANUAL DO NOT SPECIFICALLY RELATE TO THE NOTED IRREGULARITY, USE OF THE BRONCO SHOULD BE STOPPED AND A QUALIFIED MECHANIC WITH PROPER KNOWLEDGE SHOULD CORRECT THE IRREGULARITY BEFORE WORK IS RESUMED.

Safety and Workmanship

Your safety, and that of others, is the first consideration when engaging in the maintenance of equipment. Always be conscious of moving components and pinch points. Do not allow heavy objects to rest in an unstable position. When raising a portion of the Bronco, ensure that adequate support is provided.

Cleanliness

The single most important item in preserving the long service life of the Bronco is keeping foreign materials out of the vital components. Reasonable precautions have been taken to safeguard against this. However, these areas must be maintained on a scheduled basis in order to preserve proper function of the all-terrain scaffold.

6.4 Decal Replacement

All decals must be mounted to the Bronco as specified and clearly legible.

Note: Refer to Figure 5.3 and Table 5.1 for decal positions and ReechCraft part numbers.

To replace a damaged decal, first remove it completely without damaging the underlying surface. Remove any remaining adhesive with a suitable solvent. Test the solvent on an inconspicuous area first to ensure it does not mark or damage the surface finish.

NOTICE

SURFACE DAMAGE COULD RESULT IN CORROSION AND STRUCTURAL DAMAGE.

- Before applying the new decal, ensure the surface is clean and dry.
- Remove the backing paper, apply the decal along one edge, then seal it gently and evenly.
- If there are any air bubbles, work them gently towards the edge with a clean cloth.
- Pressure sensitive adhesives reach full strength after several days.

SECTION 7

WARRANTY

ReechCraft, Inc. North American End-User Limited Warranties

Thank you for purchasing a ReechCraft product. Please read the following warranty for details about ReechCraft's limited manufacturer's warranty (the "end-user warranty").

By using the products (as defined below), you agree to the following provisions, which contain limitations on warranties and liabilities and on your remedies.

All new ReechCraft equipment with serial numbers and date-coded gearboxes (the "product") must be registered at warranty.reechcraft.com to activate the product's end-user warranty.

ReechCraft, Inc.'s ("ReechCraft") end-user warranty applies to new product only that is manufactured after September 1, 2018. The end-user warranty is solely for the benefit of the original end user who purchases the product from an authorized reseller of ReechCraft product (the "end user") and is a "manufacturer's" warranty provided directly by ReechCraft to the end user, effective on the end user's original date of purchase. For purposes of this end-user warranty, an authorized reseller of ReechCraft product shall be referred to herein as "reseller." In the event a reseller leases product to a customer of the reseller with or without consideration, the end-user warranty shall apply to the reseller only and NOT to a lessee of the product.

ReechCraft warrants all products for a period of 12 months and all other components and accessories for a period of 90 days from the end user's original date of purchase (the "warranty period"). The end-user warranty is non-transferable by the end user and only applies to product manufactured after September 1, 2018.

During the warranty period, ReechCraft warrants products to be free from defects in materials and workmanship. ReechCraft's obligation and liability on any products that ReechCraft has determined to have been defective in materials or workmanship shall be limited to the repair or replacement of the product, at the sole option of ReechCraft. Such replacement parts shall be provided at no cost to the end user. Replacement parts and components provided under this end-user warranty will continue to be covered until the end of the warranty period. Replacement parts and components purchased by the end user from ReechCraft or a reseller beyond the expiration of the warranty period will carry their own 90-day end-user warranty.

All products purchased by the end user must be registered at warranty.reechcraft.com within 60 days of the end user's purchase for the end-user warranty to be activated. In the event an end user fails to register the product within the 60-day period, this end-user warranty will not apply. ReechCraft reserves the right to request maintenance records of defective parts prior to settling any warranty claim, as well as to deny such claim if maintenance records are not available or not compliant with the product's maintenance schedules. All warranty claims must be submitted in writing as outlined in the claims procedure section, which can be obtained at reechcraft.com/warrantyclaim or by calling **1-888-600-6160**.

What The End-User Warranty Does Not Cover:

This end-user warranty does not cover any product (a) for which you are not the original purchaser; (b) that is repaired after the warranty period has expired; (c) manufactured before September 1, 2018; (d) normal wear and tear; (e) that has been installed other than per the product's instruction guidelines; (f) that has been improperly maintained or maintained, altered, modified, or repaired by someone other than ReechCraft or a ReechCraft authorized service center; (g) on which the serial number has been altered, removed, or rendered illegible; (h) that has been physically damaged, other than by ReechCraft or a ReechCraft reseller; (i) accidents, failure to follow instructions, use outside the scope of any other provided documentation (e.g., warning or instruction labels, owner's manual, installation instructions, etc.), misuse, abuse, neglect, fire, flood, or acts of God; or (j) warranties provided by the reseller of the product.

Misuse may include, but is not limited to, damage to product by vehicles, tools, people, animals, the use of products beyond rated capacity, and using a product in any matter contrary to the warning or instruction labels on the product and the product's Operator's Safety Manual. Manuals can be obtained by contacting ReechCraft at **1-888-600-6160** or at **reechcraft.com**.

This end-user warranty does not cover any labor (including repair labor), travel time or mileage for pickup and delivery, shipping or freight costs, or lost income for down time. Additionally, this end-user warranty does not cover any duties, taxes, or environmental fees, including but not limited to the disposal or handling of materials.

Parts purchased or sourced by suppliers other than ReechCraft or a ReechCraft reseller are not covered under this end-user warranty. Under no circumstances will ReechCraft be responsible for any expense in connection with any repairs using unauthorized parts or in connection with any repairs made by anyone other than a reseller of the product or other ReechCraft authorized service station, unless such repairs have been specified in writing from ReechCraft.

THIS END-USER LIMITED WARRANTY IS IN LIEU OF ALL OTHER EXPRESS OR IMPLIED WARRANTIES. THIS END-USER WARRANTY IS THE SOLE AND EXCLUSIVE REMEDY OF THE END-USER, WHICH IS THE REPAIR OR REPLACEMENT OF PARTS TO THE AFFECTED PRODUCT. TO THE EXTENT PERMITTED BY APPLICABLE LAW, REECHCRAFT EXPRESSLY DISCLAIMS ALL WARRANTIES, REPRESENTATIONS, OR CONDITIONS OF ANY KIND, EXCEPT AS EXPRESSLY STATED HEREIN. REECHCRAFT DISCLAIMS ALL WARRANTIES OR GUARANTEES, ORAL OR WRITTEN, EXPRESS OR IMPLIED (FROM ANY COURSE OF DEALING OR USAGE OF TRADE), INCLUDING BUT NOT LIMITED TO ANY WARRANTY OF NON-INFRINGEMENT, WARRANTY OF MERCHANTABILITY, OR FITNESS FOR A PARTICULAR PURPOSE.

THIS END-USER LIMITED WARRANTY MAY NOT BE MODIFIED, EXTENDED, OR ENLARGED BY ANY REPRESENTATIVE OF REECHCRAFT OR INTERMEDIATE SALES ASSOCIATE, RESELLER OF REECHCRAFT PRODUCT, OR AGENT.

IN NO EVENT SHALL REECHCRAFT, ITS DIRECTORS, OFFICERS, EMPLOYEES, OR AGENTS BE LIABLE FOR ANY SPECIAL, INCIDENTAL, CONSEQUENTIAL, PUNITIVE, OR EXEMPLARY DAMAGES, INCLUDING BUT NOT LIMITED TO LOST PROFITS OR REVENUE, THE COST OF RENTAL OR REPLACEMENT EQUIPMENT, DOWNTIME, DAMAGE TO PROPERTY AND THIRD-PARTY CLAIMS, OR ANY OTHER COMMERCIAL OR ECONOMIC LOSSES OF ANY KIND, WHETHER BASED ON CONTRACT, TORT (INCLUDING THEORIES OF NEGLIGENCE, RECKLESSNESS, STRICT LIABILITY, OR DEFECTIVE PRODUCT LIABILITY), OR ANY LEGAL THEORY, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES OR THEY ARE FORESEEABLE, ARISING OUT OF THE END USER'S USE OR INABILITY TO USE THE PRODUCT.

ANY REPAIR OF THE PRODUCT UNDERTAKEN WITHOUT PRIOR WRITTEN AUTHORIZATION FROM REECHCRAFT WILL VOID THIS WARRANTY.

These warranties give the end user specific legal rights. As the end user, you may also have other rights which may vary from state to state. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to every end user.

All claims or disputes arising under or in connection with this end-user warranty shall be governed under the laws of the State of North Dakota and the laws of the United States (without giving effect to principles of conflicts of laws). The location of any dispute shall be Fargo, North Dakota. Any provision of this end-user warranty which is, or is deemed to be, unenforceable in any jurisdiction shall be severable from this end-user warranty in that jurisdiction, without in any way invalidating the remaining provisions of this end-user warranty, and any such unenforceability in that jurisdiction shall not make that provision unenforceable in any other jurisdiction.

ReechCraft.
Bronco[™]

ReechCraft® , Inc.

845 34th St N

Fargo, ND 58102

888-600-6160

reechcraft.com/bronco